

**Gold King Mine Release
Sampling and Analysis Plan/Quality Assurance Project Plan**

To: Craig Myers
From: Mark Blanchard
CC: Joyce Ackerman, Richard Graham, Joyel Dhieux, Dan Wall
TDD#: 0001/1508-04
Date: 8/11/2015
DCN: W0267.1E.00534
Re: Addendum 3 to Gold King Mine Release SAP/QAPP – Surface Soil Sampling

Comments: This is Addendum 3 to the Gold King Mine Release SAP/QAPP, dated 8/8/15. This Addendum provides the following:

1. Written protocol for collecting surface soil samples from within the area affected by the Gold King Mine release.
2. List of analytes and corresponding detection limits by laboratory.
3. ERT Standard Operating Procedure for Soil Sampling.

Purpose and Scope

START will collect surface soil samples to characterize depositional impacts from the Gold King Mine release. Samples will be collected from within the area of potential impact from the release. Anticipated sampling locations include, but are not limited to:

- ☐ Irrigation diversions
- ☐ Agricultural fields
- ☐ Stream and river banks

Sample points will be determined in the field and will be located with a Global Positioning System (GPS) device to be used for mapping purposes and to document sample locations selected in the field. If sampling locations become inaccessible, alternate sampling locations which provide similarly adequate or sufficient data as the original will be identified and sampled based upon the best judgment of the inspector/sampler, if necessary.

Sampling and Field QC Procedures

Sampling will include collection of surface soil samples from a depth of 0-2 cm and will be biased for sampling in areas of potential contamination. Sample collection procedures will follow those in ERT SOP 2012. Samples will be analyzed for total metals using methods 6010B, 6020A, and 7471A. Requirements for the sample container, volume, preservation, and QC samples are presented on Worksheet 19 & 30 (Sample Containers, Preservation and Hold Times) and Worksheet 20 (Field Quality Control Sample Summary) of the QAPP. The following table lists surface soil screening criteria that may be used to evaluate the analytical results of the surface soil samples and corresponding method detection limits by laboratory.

Metal	CAS	Units	EPA Soil RSLs		EPA Eco-SSL				Test America			ESAT		
			Residential	Industrial	Avian	Invertebrate	Mammalian	Plants	6010B	6020A	7471A	6010C	6020A	7471A
Aluminum	7429-90-5	mg/Kg	77000	1100000	NE	NE	NE	NE	3.10	2.10	--	2.00	0.5	--
Antimony	7440-36-0	mg/Kg	31	470	NE	78	0.27	NE	0.820	0.100	--	5.00	0.05	--
Arsenic	7440-38-2	mg/Kg	0.68	3	43	NE	46	18	0.800	0.100	--	6.00	0.05	--
Barium	7440-39-3	mg/Kg	15000	220000	NE	330	2000	NE	0.160	0.0600	--	0.20	0.5	--
Beryllium	7440-41-7	mg/Kg	160	2300	NE	40	21	NE	0.0100	0.0150	--	0.20	0.01	--
Cadmium	7440-43-9	mg/Kg	71	980	0.77	140	0.36	32	0.100	0.0150	--	0.20	0.01	--
Calcium	7440-70-2	mg/Kg	NE	NE	NE	NE	NE	NE	5.20	6.3	--	10.00	--	--
Chromium	7440-47-3	mg/Kg	NE	NE	NE	NE	NE	NE	0.210	0.0100	--	0.20	0.01	--
Cobalt	7440-48-4	mg/Kg	23	350	120	NE	230	13	0.100	0.110	--	0.20	0.1	--
Copper	7440-50-8	mg/Kg	3100	47000	120	NE	230	13	0.170	0.130	--	0.20	0.05	--
Iron	7439-89-6	mg/Kg	55000	820000	NE	NE	NE	NE	5.30	3.50	--	10.00	--	--
Lead	7439-92-1	mg/Kg	400	800	11	1700	56	120	0.340	0.0500	--	1.00	0.01	--
Magnesium	7439-95-4	mg/Kg	NE	NE	NE	NE	NE	NE	8.90	3.30	--	10.00	--	--
Manganese	7439-96-5	mg/Kg	1,800	40	4300	450	4000	220	0.100	0.120	--	0.20	0.025	--
Mercury	7439-97-6	mg/Kg	9.4	40	NE	0.1	NE	0.3	--	--	0.008	--	--	0.01
Molybdenum	7439-98-7	mg/Kg	390	5800	NE	NE	NE	2	0.130	0.0800	--	1.00	0.1	--
Nickel	7440-02-0	mg/Kg	1500	22000	210	280	130	38	0.380	0.260	--	0.50	0.05	--
Potassium	7440-09-7	mg/Kg	NE	22000	NE	NE	NE	NE	2.50	9.10	--	25.00	--	--
Selenium	7782-49-2	mg/Kg	390	5800	1.2	4.1	0.63	0.52	0.970	0.100	--	6.00	0.1	--
Silver	7440-22-4	mg/Kg	390	5800	4.2	NE	14	560	0.0600	0.0100	--	0.20	0.05	--
Sodium	7440-23-5	mg/Kg	1.3	16	NE	NE	NE	NE	48.0	10.0	--	25.00	--	--
Thallium	7440-28-0	mg/Kg	0.78	12	NE	NE	NE	1	0.600	0.0500	--	2.00	0.1	--
Vanadium	7440-62-2	mg/Kg	390	5800	7.8	NE	280	2	0.100	0.270	--	1.00	0.2	--
Zinc	7440-66-6	mg/Kg	23000	350000	46	120	79	160	0.700	1.00	--	1.00	0.2	--

EPA Regional Screening Levels (RSLs), 2015. Available at: <http://www.epa.gov/region9/superfund/prg/>.

EPA Ecological Soil Screening Levels (Eco-SSLs), 2005 c/o Oak Ridge National Laboratory (ORNL) Ecological Benchmark Tool. Available at: http://rais.ornl.gov/tools/eco_search.php

mg/Kg milligrams per kilogram

NE None Established

The above surface soil criteria are not regulatory action levels, but are human health and ecological screening benchmarks used to determine when sites may warrant further evaluation. The exceedances of these benchmarks do not automatically indicate a response action is warranted.

START personnel will collect field duplicate and matrix spike/matrix spike duplicate (MS/MSD) samples and QA/QC samples as needed during the sampling activities. QA/QC samples will be collected as presented in Worksheet 20 of the QAPP.



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 1 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

CONTENTS

- 1.0 SCOPE AND APPLICATION
- 2.0 METHOD SUMMARY
- 3.0 SAMPLE PRESERVATION, CONTAINERS, HANDLING, AND STORAGE
- 4.0 POTENTIAL PROBLEMS
- 5.0 EQUIPMENT
- 6.0 REAGENTS
- 7.0 PROCEDURES
 - 7.1 Preparation
 - 7.2 Sample Collection
 - 7.2.1 Surface Soil Samples
 - 7.2.2 Sampling at Depth with Augers and Thin Wall Tube Samplers
 - 7.2.3 Sampling at Depth with a Trier
 - 7.2.4 Sampling at Depth with a Split Spoon (Barrel) Sampler
 - 7.2.5 Test Pit/Trench Excavation
- 8.0 CALCULATIONS
- 9.0 QUALITY ASSURANCE/QUALITY CONTROL
- 10.0 DATA VALIDATION
- 11.0 HEALTH AND SAFETY
- 12.0 REFERENCES
- 13.0 APPENDIX
 - Figures

SUPERCEDES: SOP #2012; Revision 0.0; 11/16/94; U.S. EPA Contract 68-C4-0022.



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 2 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

1.0 SCOPE AND APPLICATION

The purpose of this standard operating procedure (SOP) is to describe the procedures for the collection of representative soil samples. Sampling depths are assumed to be those that can be reached without the use of a drill rig, direct-push, or other mechanized equipment (except for a back-hoe). Analysis of soil samples may determine whether concentrations of specific pollutants exceed established action levels, or if the concentrations of pollutants present a risk to public health, welfare, or the environment.

These are standard (i.e., typically applicable) operating procedures which may be varied or changed as required, dependent upon site conditions, equipment limitations or limitations imposed by the procedure. In all instances, the actual procedures used should be documented and described in an appropriate site report.

Mention of trade names or commercial products does not constitute U.S. Environmental Protection Agency (EPA) endorsement or recommendation for use.

2.0 METHOD SUMMARY

Soil samples may be collected using a variety of methods and equipment depending on the depth of the desired sample, the type of sample required (disturbed vs. undisturbed), and the soil type. Near-surface soils may be easily sampled using a spade, trowel, and scoop. Sampling at greater depths may be performed using a hand auger, continuous flight auger, a trier, a split-spoon, or, if required, a backhoe.

3.0 SAMPLE PRESERVATION, CONTAINERS, HANDLING, AND STORAGE

Chemical preservation of solids is not generally recommended. Samples should, however, be cooled and protected from sunlight to minimize any potential reaction. The amount of sample to be collected and proper sample container type are discussed in ERT/REAC SOP #2003 Rev. 0.0 08/11/94, *Sample Storage, Preservation and Handling*.

4.0 INTERFERENCES AND POTENTIAL PROBLEMS

There are two primary potential problems associated with soil sampling - cross contamination of samples and improper sample collection. Cross contamination problems can be eliminated or minimized through the use of dedicated sampling equipment. If this is not possible or practical, then decontamination of sampling equipment is necessary. Improper sample collection can involve using contaminated equipment, disturbance of the matrix resulting in compaction of the sample, or inadequate homogenization of the samples where required, resulting in variable, non-representative results.

5.0 EQUIPMENT



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 3 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

Soil sampling equipment includes the following:

- Maps/plot plan
- Safety equipment, as specified in the site-specific Health and Safety Plan
- Survey equipment or global positioning system (GPS) to locate sampling points
- Tape measure
- Survey stakes or flags
- Camera and film
- Stainless steel, plastic, or other appropriate homogenization bucket, bowl or pan
- Appropriate size sample containers
- Ziplock plastic bags
- Logbook
- Labels
- Chain of Custody records and custody seals
- Field data sheets and sample labels
- Cooler(s)
- Ice
- Vermiculite
- Decontamination supplies/equipment
- Canvas or plastic sheet
- Spade or shovel
- Spatula
- Scoop
- Plastic or stainless steel spoons
- Trowel(s)
- Continuous flight (screw) auger
- Bucket auger
- Post hole auger
- Extension rods
- T-handle
- Sampling trier
- Thin wall tube sampler
- Split spoons
- Vehimeyer soil sampler outfit
 - Tubes
 - Points
 - Drive head
 - Drop hammer
 - Puller jack and grip
- Backhoe

6.0 REAGENTS



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 4 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

Reagents are not used for the preservation of soil samples. Decontamination solutions are specified in ERT/REAC SOP #2006 Rev. 0.0 08/11/94, *Sampling Equipment Decontamination*, and the site specific work plan.

7.0 PROCEDURES

7.1 Preparation

1. Determine the extent of the sampling effort, the sampling methods to be employed, and the types and amounts of equipment and supplies required.
2. Obtain necessary sampling and monitoring equipment.
3. Decontaminate or pre-clean equipment, and ensure that it is in working order.
4. Prepare schedules and coordinate with staff, client, and regulatory agencies, if appropriate.
5. Perform a general site survey prior to site entry in accordance with the site specific Health and Safety Plan.
6. Use stakes, flagging, or buoys to identify and mark all sampling locations. Specific site factors, including extent and nature of contaminant, should be considered when selecting sample location. If required, the proposed locations may be adjusted based on site access, property boundaries, and surface obstructions. All staked locations should be utility-cleared by the property owner or the On-Scene-Coordinator (OSC) prior to soil sampling; and utility clearance should always be confirmed before beginning work.

7.2 Sample Collection

7.2.1 Surface Soil Samples

Collection of samples from near-surface soil can be accomplished with tools such as spades, shovels, trowels, and scoops. Surface material is removed to the required depth and a stainless steel or plastic scoop is then used to collect the sample.

This method can be used in most soil types but is limited to sampling at or near the ground surface. Accurate, representative samples can be collected with this procedure depending on the care and precision demonstrated by the sample team member. A flat, pointed mason trowel to cut a block of the desired soil is helpful when undisturbed profiles are required. Tools plated with chrome or other materials should not be used. Plating is particularly common with garden implements such as potting trowels.

The following procedure is used to collect surface soil samples:



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 5 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

1. Carefully remove the top layer of soil or debris to the desired sample depth with a pre-cleaned spade.
2. Using a pre-cleaned, stainless steel scoop, plastic spoon, or trowel, remove and discard a thin layer of soil from the area which came in contact with the spade.
3. If volatile organic analysis is to be performed, transfer the sample directly into an appropriate, labeled sample container with a stainless steel lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval or location into the homogenization container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

7.2.2 Sampling at Depth with Augers and Thin Wall Tube Samplers

This system consists of an auger, or a thin-wall tube sampler, a series of extensions, and a "T" handle (Figure 1, Appendix A). The auger is used to bore a hole to a desired sampling depth, and is then withdrawn. The sample may be collected directly from the auger. If a core sample is to be collected, the auger tip is then replaced with a thin wall tube sampler. The system is then lowered down the borehole, and driven into the soil to the completion depth. The system is withdrawn and the core is collected from the thin wall tube sampler.

Several types of augers are available; these include: bucket type, continuous flight (screw), and post-hole augers. Bucket type augers are better for direct sample recovery because they provide a large volume of sample in a short time. When continuous flight augers are used, the sample can be collected directly from the flights. The continuous flight augers are satisfactory when a composite of the complete soil column is desired. Post-hole augers have limited utility for sample collection as they are designed to cut through fibrous, rooted, swampy soil and cannot be used below a depth of approximately three feet.

The following procedure is used for collecting soil samples with the auger:

1. Attach the auger bit to a drill rod extension, and attach the "T" handle to the drill rod.



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 6 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

2. Clear the area to be sampled of any surface debris (e.g., twigs, rocks, litter). It may be advisable to remove the first three to six inches of surface soil for an area approximately six inches in radius around the drilling location.
3. Begin augering, periodically removing and depositing accumulated soils onto a plastic sheet spread near the hole. This prevents accidental brushing of loose material back down the borehole when removing the auger or adding drill rods. It also facilitates refilling the hole, and avoids possible contamination of the surrounding area.
4. After reaching the desired depth, slowly and carefully remove the auger from the hole. When sampling directly from the auger, collect the sample after the auger is removed from the hole and proceed to Step 10.
5. Remove auger tip from the extension rods and replace with a pre-cleaned thin wall tube sampler. Install the proper cutting tip.
6. Carefully lower the tube sampler down the borehole. Gradually force the tube sampler into the soil. Do not scrape the borehole sides. Avoid hammering the rods as the vibrations may cause the boring walls to collapse.
7. Remove the tube sampler, and unscrew the drill rods.
8. Remove the cutting tip and the core from the device.
9. Discard the top of the core (approximately 1 inch), as this possibly represents material collected before penetration of the layer of concern. Place the remaining core into the appropriate labeled sample container. Sample homogenization is not required.
10. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly.

When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 7 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

11. If another sample is to be collected in the same hole, but at a greater depth, reattach the auger bit to the drill and assembly, and follow steps 3 through 11, making sure to decontaminate the auger and tube sampler between samples.
12. Abandon the hole according to applicable state regulations. Generally, shallow holes can simply be backfilled with the removed soil material.

7.2.3 Sampling with a Trier

The system consists of a trier, and a "T" handle. The auger is driven into the soil to be sampled and used to extract a core sample from the appropriate depth.

The following procedure is used to collect soil samples with a sampling trier:

1. Insert the trier (Figure 2, Appendix A) into the material to be sampled at a 0° to 45° angle from horizontal. This orientation minimizes the spillage of sample.
2. Rotate the trier once or twice to cut a core of material.
3. Slowly withdraw the trier, making sure that the slot is facing upward.
4. If volatile organic analyses are required, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

7.2.4 Sampling at Depth with a Split Spoon (Barrel) Sampler

Split spoon sampling is generally used to collect undisturbed soil cores of 18 or 24 inches in length. A series of consecutive cores may be extracted with a split spoon sampler to give a complete soil column profile, or an auger may be used to drill down to the desired depth for sampling. The split spoon is then driven to its sampling depth through the bottom of the augured hole and the core extracted.

When split spoon sampling is performed to gain geologic information, all work should



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 8 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

be performed in accordance with ASTM D1586-98, "Standard Test Method for Penetration Test and Split-Barrel Sampling of Soils".

The following procedures are used for collecting soil samples with a split spoon:

1. Assemble the sampler by aligning both sides of barrel and then screwing the drive shoe on the bottom and the head piece on top.
2. Place the sampler in a perpendicular position on the sample material.
3. Using a well ring, drive the tube. Do not drive past the bottom of the head piece or compression of the sample will result.
4. Record in the site logbook or on field data sheets the length of the tube used to penetrate the material being sampled, and the number of blows required to obtain this depth.
5. Withdraw the sampler, and open by unscrewing the bit and head and splitting the barrel. The amount of recovery and soil type should be recorded on the boring log. If a split sample is desired, a cleaned, stainless steel knife should be used to divide the tube contents in half, longitudinally. This sampler is typically available in 2 and 3 1/2 inch diameters. A larger barrel may be necessary to obtain the required sample volume.
6. Without disturbing the core, transfer it to appropriate labeled sample container(s) and seal tightly.

7.2.5 Test Pit/Trench Excavation

A backhoe can be used to remove sections of soil, when detailed examination of soil characteristics are required. This is probably the most expensive sampling method because of the relatively high cost of backhoe operation.

The following procedures are used for collecting soil samples from test pits or trenches:

1. Prior to any excavation with a backhoe, it is important to ensure that all sampling locations are clear of overhead and buried utilities.
2. Review the site specific Health & Safety plan and ensure that all safety precautions including appropriate monitoring equipment are installed as required.



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 9 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

3. Using the backhoe, excavate a trench approximately three feet wide and approximately one foot deep below the cleared sampling location. Place excavated soils on plastic sheets. Trenches greater than five feet deep must be sloped or protected by a shoring system, as required by OSHA regulations.
4. A shovel is used to remove a one to two inch layer of soil from the vertical face of the pit where sampling is to be done.
5. Samples are taken using a trowel, scoop, or coring device at the desired intervals. Be sure to scrape the vertical face at the point of sampling to remove any soil that may have fallen from above, and to expose fresh soil for sampling. In many instances, samples can be collected directly from the backhoe bucket.
6. If volatile organic analyses are required, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. When compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.
7. Abandon the pit or excavation according to applicable state regulations. Generally, shallow excavations can simply be backfilled with the removed soil material.

8.0 CALCULATIONS

This section is not applicable to this SOP.

9.0 QUALITY ASSURANCE/QUALITY CONTROL

There are no specific quality assurance (QA) activities which apply to the implementation of these procedures. However, the following QA procedures apply:

1. All data must be documented on field data sheets or within site logbooks.
2. All instrumentation must be operated in accordance with operating instructions as supplied by the manufacturer, unless otherwise specified in the work plan. Equipment checkout and calibration



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 10 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

activities must occur prior to sampling/operation, and they must be documented.

10.0 DATA VALIDATION

This section is not applicable to this SOP.

11.0 HEALTH AND SAFETY

When working with potentially hazardous materials, follow U.S. EPA, OHSA and corporate health and safety procedures, in addition to the procedures specified in the site specific Health & Safety Plan..

12.0 REFERENCES

Mason, B.J. 1983. Preparation of Soil Sampling Protocol: Technique and Strategies. EPA-600/4-83-020.

Barth, D.S. and B.J. Mason. 1984. Soil Sampling Quality Assurance User's Guide. EPA-600/4-84-043.

U.S. Environmental Protection Agency. 1984 Characterization of Hazardous Waste Sites - A Methods Manual: Volume II. Available Sampling Methods, Second Edition. EPA-600/4-84-076.

de Vera, E.R., B.P. Simmons, R.D. Stephen, and D.L. Storm. 1980. Samplers and Sampling Procedures for Hazardous Waste Streams. EPA-600/2-80-018.

ASTM D 1586-98, ASTM Committee on Standards, Philadelphia, PA.



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 11 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

APPENDIX A
Figures
SOP #2012
February 2000




U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 12 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

FIGURE 1. Sampling Augers

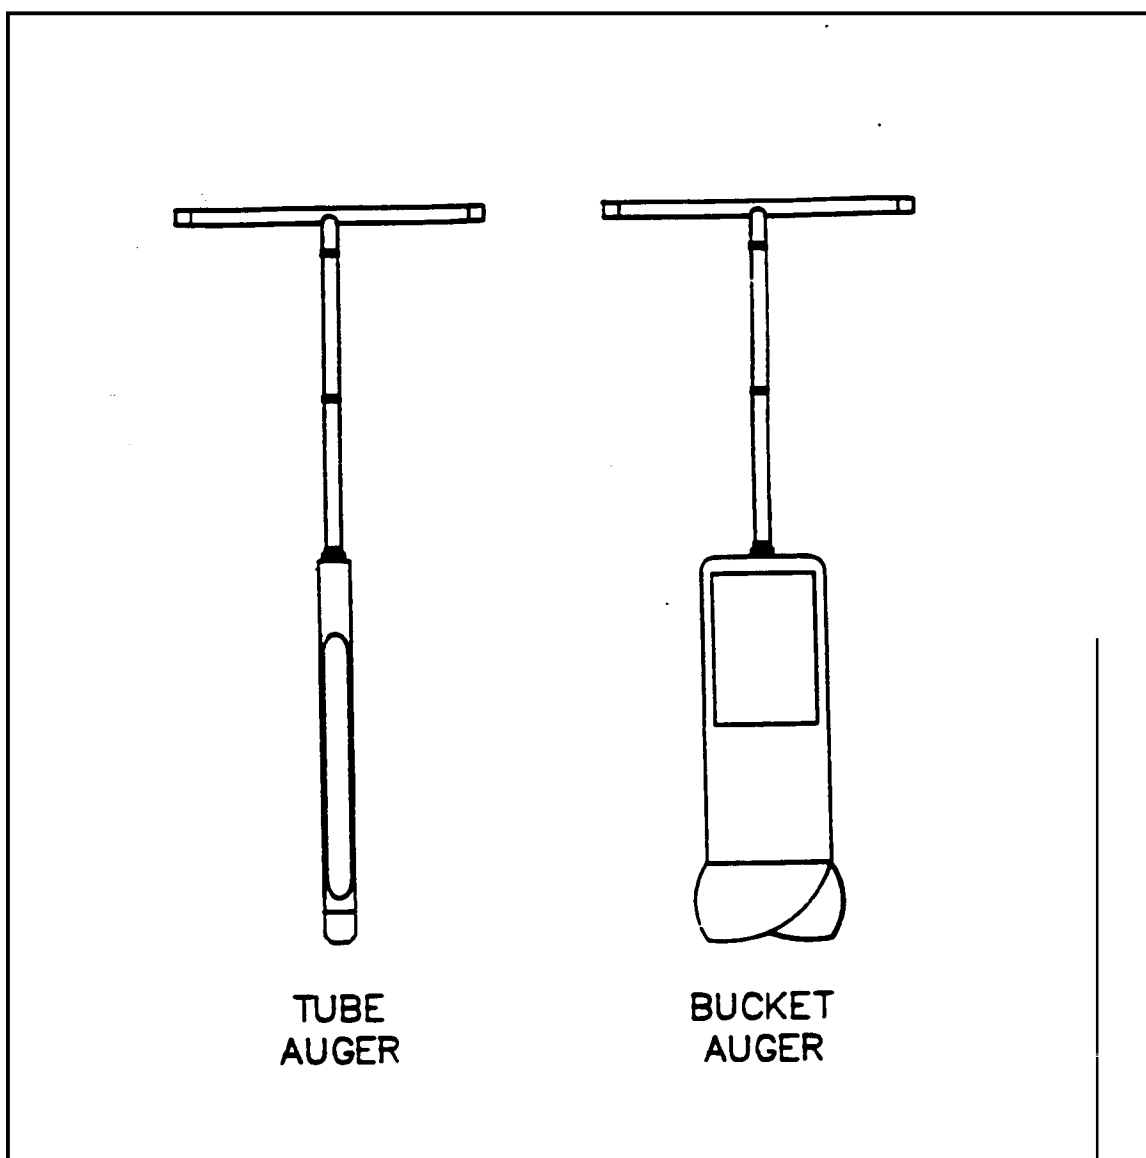



U. S. EPA ENVIRONMENTAL RESPONSE TEAM

STANDARD OPERATING PROCEDURES

SOP: 2012
PAGE: 13 of 13
REV: 0.0
DATE: 02/18/00

SOIL SAMPLING

FIGURE 2. Sampling Trier

